




# Wristband Application Instructions

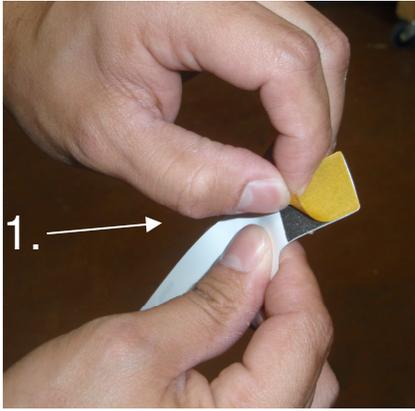


**1. Peel off the underneath side of the sticky tape.**

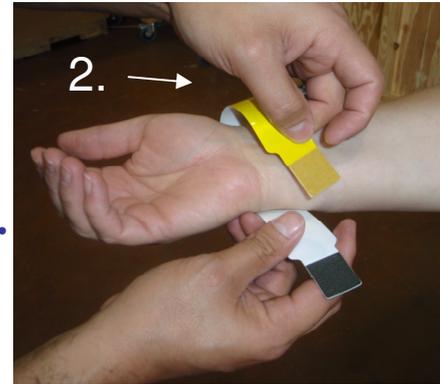

**2. Wrap the wristband around the evacuee's wrist.**

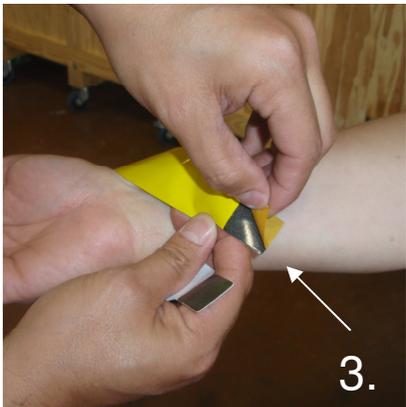

**3. Remove the overlapping side of the sticky tape.**

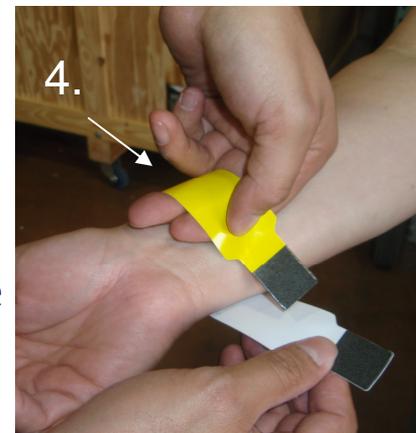

**4. With 2 fingers under the wristband attach the underneath side sticky pad on the underside of the wristband.**



**5. Confirm 2 finger looseness.**

Radiant RFID Confidential-for use by intended recipient only